PREMIER®

MANUAL DE INSTRUCCIONES
VENTILADOR TIPO TORRE
AB-4919T

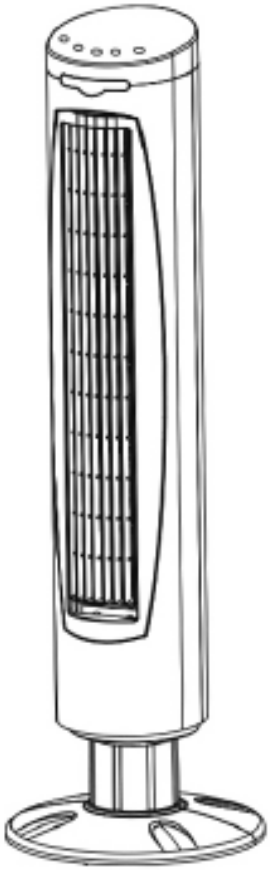

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

INSTRUCCIONES DE SEGURIDAD 2
ENSAMBLAJE 2
CONTROL REMOTO 3
INSTRUCCIONES DE OPERACIÓN 4
TEMPORIZADOR 4
LIMPIEZA Y MANTENIMIENTO 4

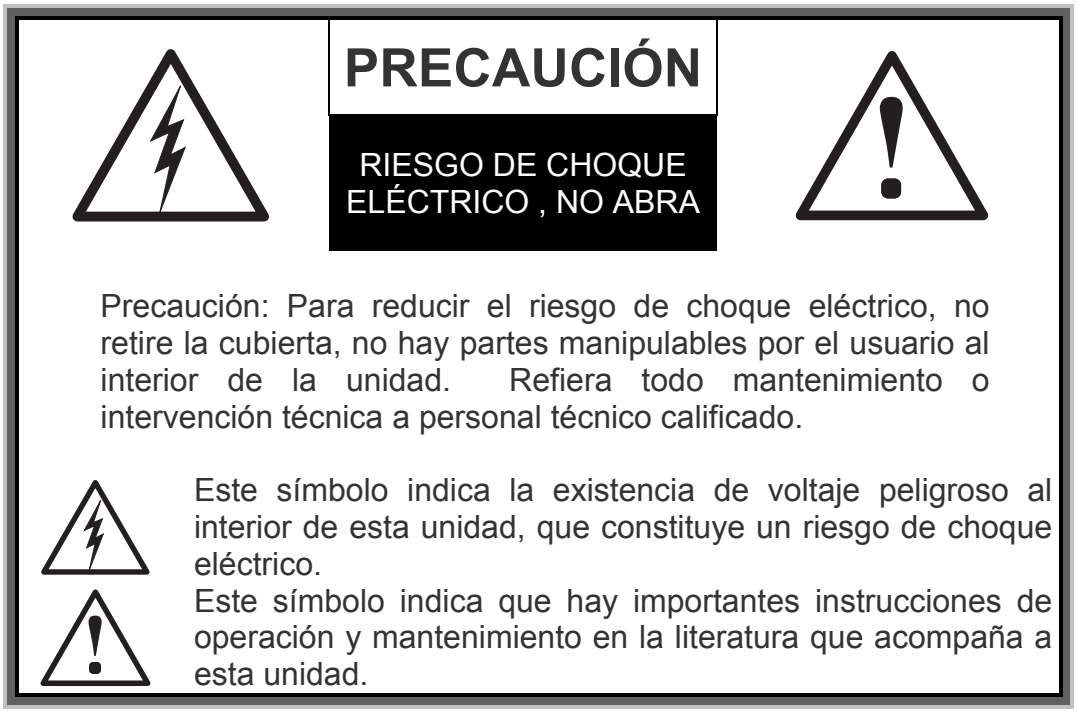
PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

⚠INSTRUCCIONES DE SEGURIDAD

- Utilice el ventilador únicamente como se describe en este manual. Otros usos no son recomendados y pueden causar fuego, choque eléctrico o lesiones personales.
- Este producto está diseñado para uso en casa únicamente y no para uso comercial, industrial o en exteriores.
- Para evitar el riesgo de choque eléctrico no coloque el ventilador en las ventanas, ni introduzca la unidad o el cable en agua, ni salpique con líquidos.
- Esta unidad tiene un enchufe polarizado (una pata es más gruesa que la otra). Para reducir el riesgo de choque eléctrico, este enchufe debe encajar en el orificio grande del tomacorriente.
- Se requiere estricta supervisión si la unidad se utiliza cerca de niños.
- Apague el ventilador y desconecte el cable de poder cuando no lo esté utilizando, cuando cambie el ventilador de posición y antes de limpiarlo.
- Para desconectar el ventilador, hale del enchufe y no del cable.
- No utilice el ventilador con el cable dañado, si se ha golpeado o se observa algún signo de falla.
- Evite el contacto del cuerpo con las partes móviles.
- El uso de accesorios no recomendados por el fabricante puede ser peligroso.
- Coloque el ventilador sobre una superficie plana, seca y estable.
- No monte el ventilador en la pared o en el techo.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

ENSAMBLAJE

Nota: La parte del pilar de la base del ventilador está conformada por 2 piezas las cuales están ubicadas en la mitad de la caja. La base del ventilador está conformada por 2 piezas que están ubicadas en el extremo de la caja.

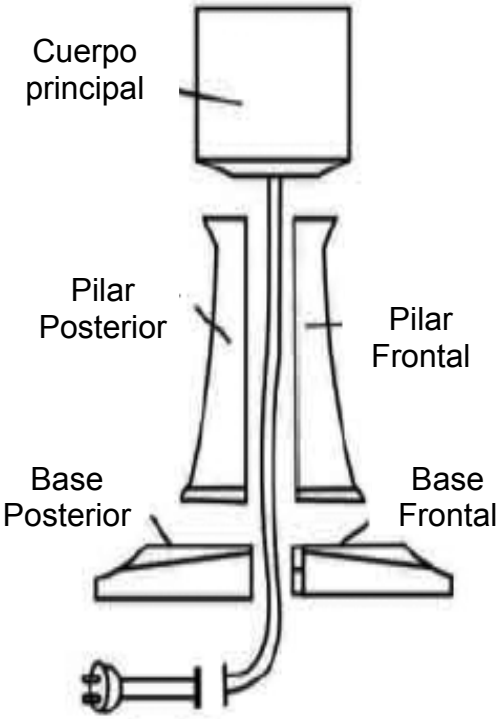

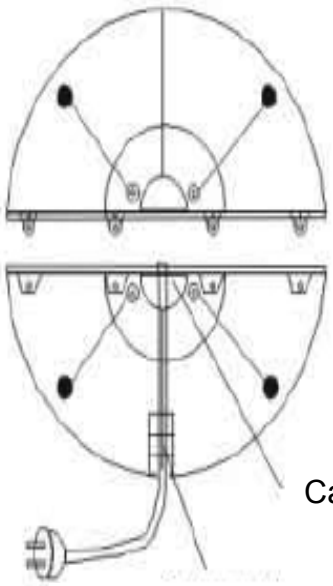
Transporte de cable de poder

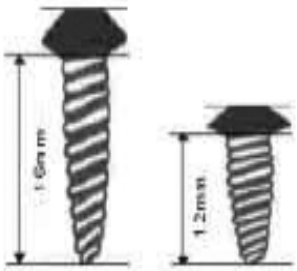

Canal de cable de poder en la base posterior

1. Presione el cable de poder hacia abajo del “Canal del cable de poder” entre los Pilares Frontal y Posterior. Ajuste los pilares Frente y Posterior.
2. Coloque las partes ensambladas sobre la base del cuerpo principal. Utilizando un destornillador de estrella, introduzca los 4 tornillos a través del ensamblaje superior en el cuerpo principal y apriete.
3. Una la base frontal y la base posterior y apriete utilizando los 2 tornillos cortos.
4. Lleve el cable de poder a través de la abertura central en el ensamblaje de la base.
5. Coloque el ensamblaje de la base sobre el ensamblaje de los pilares y apriete utilizando 4 tornillos cortos.
6. Asegure el cable de poder en el transporte del cable de poder.

CONTROL REMOTO

- Retire las baterías si no va a utilizar el control remoto por un tiempo prolongado.
- No mezcle baterías nuevas con viejas.
- No mezcle baterías alcalinas con baterías recargables.

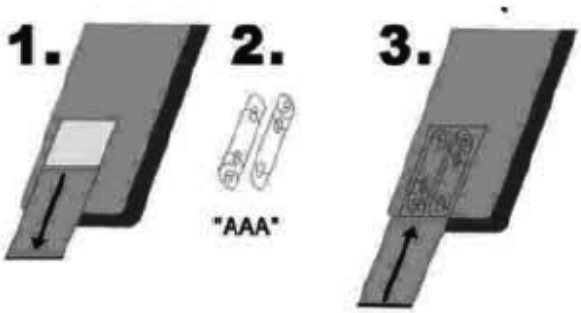

- Los botones del control remoto funcionarán de igual manera que los botones en el panel de control ubicados en la parte superior del ventilador.
- El control remoto puede ser utilizado hasta 6 metros de distancia del ventilador. Asegúrese de apuntar directamente al frente del ventilador para asegurar comunicación adecuada.
- Escuchará un “bip” del ventilador y las luces en el control remoto se encenderán cuando el ventilador acepte las instrucciones del control remoto.
- Usted puede colocar y retirar el control remoto del compartimiento en la unidad.

INSTRUCCIONES DE OPERACIÓN

Todas las características de este ventilador pueden ser controladas a partir del panel de control o en el control remoto.

APAGAR Y ENCENDER EL VENTILADOR

Presione este botón para encender la unidad en el panel de control o en el control remoto. Presione una vez más para apagarla.

VELOCIDAD DEL VENTILADOR

Presione este botón en el panel de control o en el control remoto para ajustar la velocidad. Cada vez que lo presione la velocidad cambia entre los niveles Bajo, Medio y Alto.

OSCILACIÓN

El ventilador está diseñado para oscilar para enfriar eficientemente grandes espacios. Para COMENZAR la oscilación, presione el botón en el panel de control o en el control remoto. Para DETENER presione una vez más.

Presione el botón MODO para activar el modo “natural” y presione de nuevo para activar el modo “dormitar”. Para seleccionar el modo “normal” presione una tercera vez.

TEMPORIZADOR

El ventilador cuenta con un temporizador. El rango está entre 0,5 y 7,5 horas. Usted puede ajustar el ventilador para que se apague automáticamente después del periodo establecido.

Para ajustar, presione el botón TEMPORIZADOR en el panel de control o en el control remoto. Las luces que se iluminan en la parte de en frente del ventilador indican la hora establecida. Cada luz representa una cantidad de tiempo.

Para cancelar la función, presione el botón hasta que todas las luces se apaguen.

LIMPIEZA Y MANTENIMIENTO

- Apague el ventilador y desconéctelo antes del limpiarlo.
- Utilice únicamente una prenda húmeda suave.
- No introduzca el ventilador en agua ni permita que entre agua a la carcasa del motor.
- No utilice productos químicos abrasivos los cuales pueden dañar el acabado.

DIAGRAMA DE CIRCUITOS

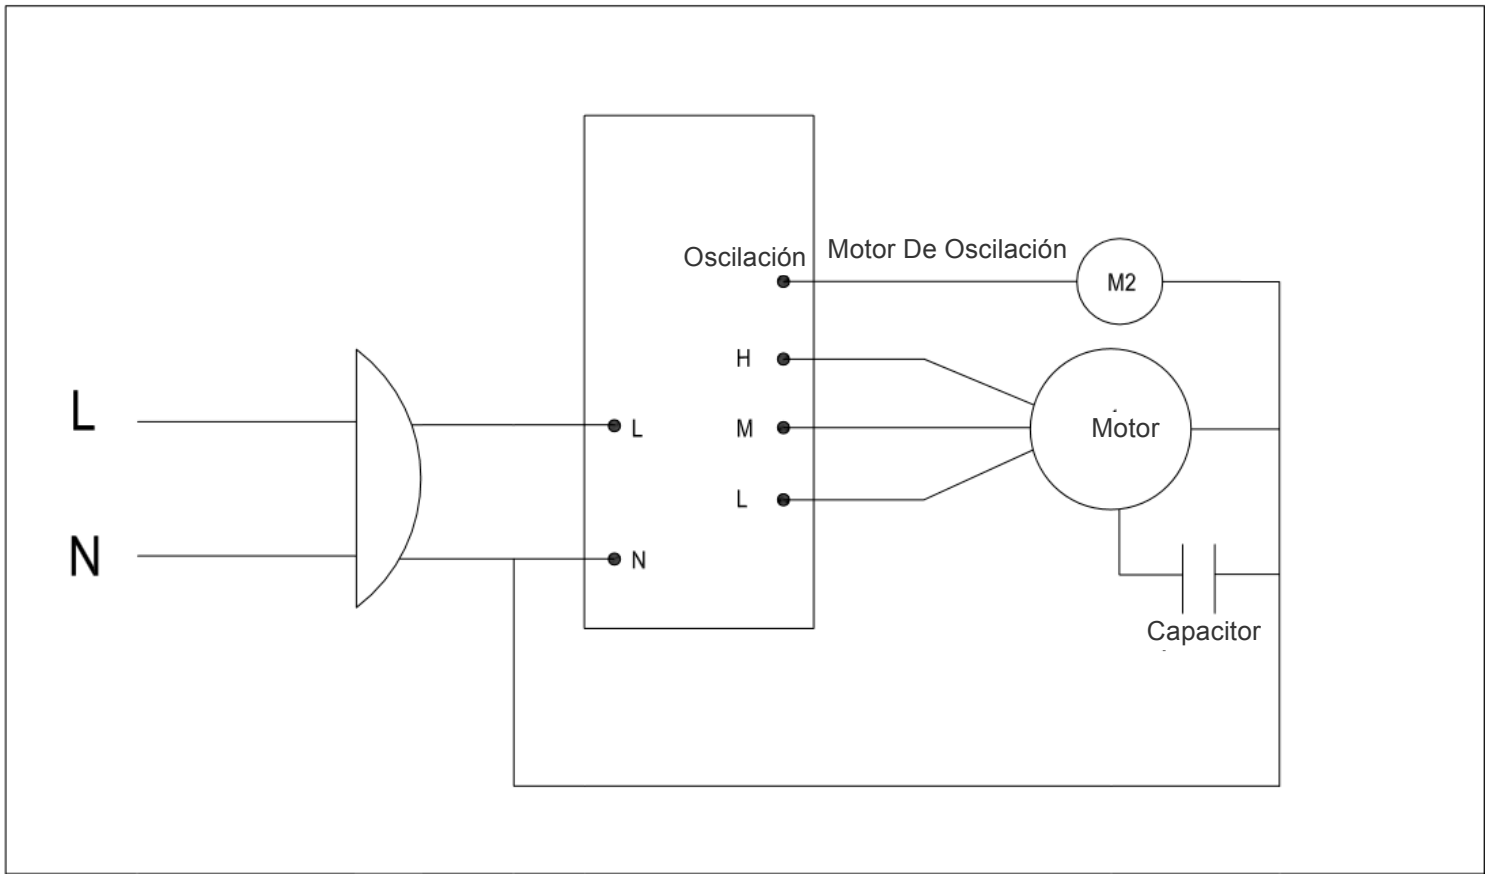

PREMIER®

INSTRUCTION MANUAL

TOWER FAN

AB-4919T

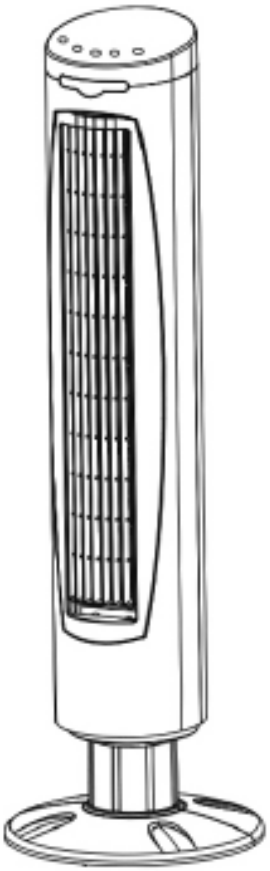

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to ***info@premiermundo.com***

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

Thanks for your selection of our product. In order to help you to use this product, please read this manual carefully before use and preser ve it properly.

READ AND SAVE THE FOLLOWING IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS FAN:

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1,Use the fan only as described in this manual. Other use is not recommended and may cause fire, electric shock or injury to persons.

2, This product is intended for household use ONLY and not for commercial, industrial or outdoor use.

3, To protect against electric-shock, do not place fan in window, immerse unit or cord in water, or spray with liquids

4, This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature.

5, Close supervision is necessary when any appliance is used by or near children.

6. Turn the fan OFF and unplug from the outlet when not in use, when moving the fan from one location to another and before cleaning.

7, To disconnect the fan, grip the plug and pull it from the wall outlet. Never pull by the cord.

8. Do not operate the fan in the presence of explosive and/or flammable fumes.

9. Do not place the fan or any parts near an open flame, cooking or other heating appliance.

10. Do not operate the fan with a damaged cord or plug, if the product malfunctions, or if it is dropped or damaged in any manner. (See warranty)

11. Avoid bodily contact with moving fan parts.

12. The use of attachments not recommended by the manufacturer may be hazardous.

13. Place the fan on a dry, level surface.

14. Do not mount fan on a wall or ceiling.
15. Do not operate if the fan housing is removed or damaged.
16. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
17. Take care not to stain plastic parts with oil. Avoid using non-industrial oils (cooking, etc.) to lubricate parts. Damage and deterioration are caused by oil sticking to parts.

WARNING: To reduce risk of fire, electric shock or injury to person:

- Unplug or disconnect the appliance from the power supply before servicing.
- Do not use this fan with any solid-state speed control device.

Save these instructions for future reference.

NOTE WHEN UNPACKING THE FAN

THE PILAR PART OF THE TOWER FAN BASE IS MADE UP OF 2 PIECES, BOTH OF WHICH ARE LOCATED IN THE MIDDLE OF THE BOX. THE BASE OF THE TOWER FAN IS MADE UP OF TWO PIECES, BOTH OF WHICH ARE LOCATED IN THE END OF THE BOX.

HOW TO ASSEMBLE:

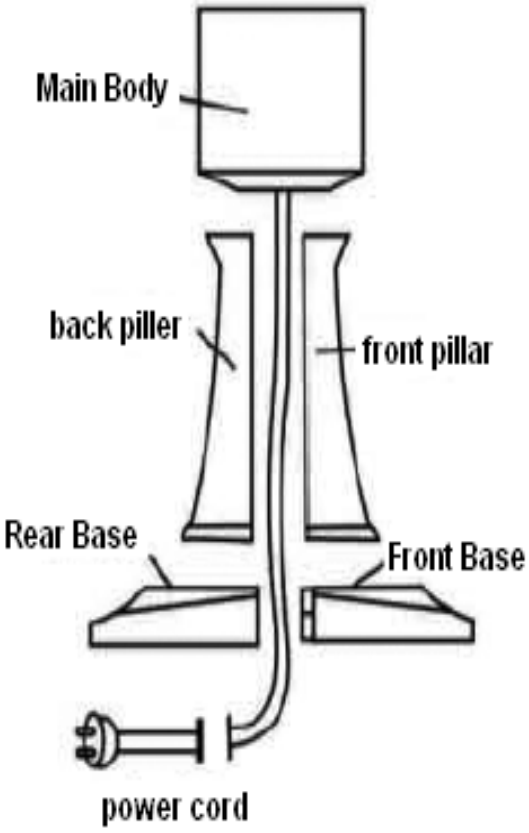

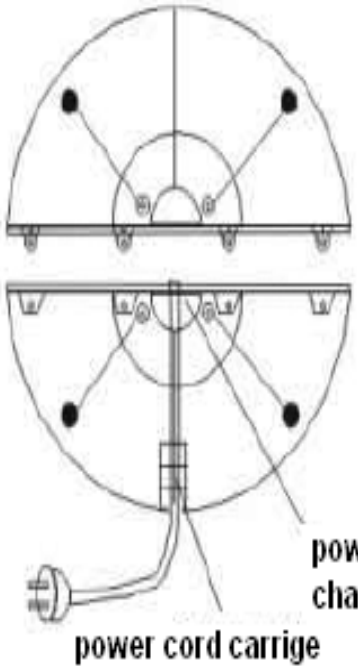

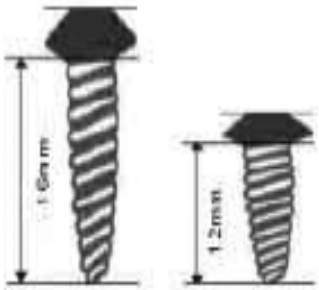

1, Pass the power cord down the " Power Cord Channel" between the "Front" and "Back" Pillars, snap the "Front" and "Back" pillar together.

2. Place assembly onto the bottom of the" Main Body". Using crosshead screw-driver, insert the four short screws through the top of the assembly into the "Main Body" and tighten.

3. Snap " Front Base" and "Rear Base" together and fasten in place using the two short screws.

4. Run power cord through central opening in Base Assembly.

5. Place Base Assembly onto the bottom of the Pillar Assembly and fasten in place using four short screws.

6. Secure "Power Cord" in "Power Cord Carriage".

REMOTE CONTROL:

HOW TO INSERT BATTERIES (NOT INCLUDED)

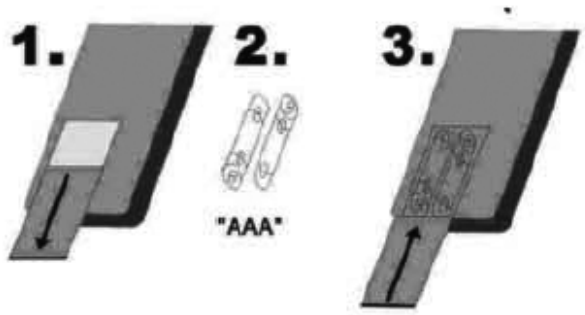

NOTE: Remove the batteries if the remote control is not to be used for a month or more. Batteries left in the unit may leak and cause damage.

" DO NOT MIX OLD AND NEW BATTERIES"

" DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.

Notes on Using the Remote control:

a, The buttons of the remote control will function in the same manner as the buttons on the control panel located on the top of the fan.

b, The remote control can be used up to 19 feet (6m) away from the fan. Be sure to point the remote directly at the front of the fan to ensure proper communication.

C, You will hear a "beep" from the fan and see the lights on the control panel illuminate when the tower fan accepts instructions from the remote control.

Instructions for use/storage of IR Remote Control:

To release remote from storage compartment, push the cover of the remote control's storage compartment down, then remove remote. To return to storage compartment, repeat the above step and place it into the storage compartment.

OPERATION METHOD:

All the features of this fan can be controlled from the "feather-touch key control pad" or the "remote control".

To turn the Fan On/Off

Gently press the "⏻" button on the "feather touch key control pad" or "ON/OFF" on the remote control once to turn fan ON. Press the "⏻" button a second time to turn the fan OFF.

To Set the Fan Speed

Gently press the "✲" button on the "feather touch key control pad" or "SPEED" button on the remote control. Each time you press the "✲" button, the speed will cycle between the "LOW" "MEDIUM" and "HIGH" settings.

Oscillating Operation

This fan is designed to oscillate to efficiently cool large spaces.

To START oscillation: Press the "↷" button on the "feather touch key control pad" or the "oscillate" button on the remote control.

To STOP oscillation: Press the "↷" button a second time.

Gently press the "△" button on the "feather touch key control pad" or "mode" button on the remote control. Press once the "△" button, the fan mode will be "nature" and press twice to set to "sleeping" mode. To select "normal" fan mode just press 3 times the "△" button and all the fan mode lights disappear.

TIMER OPERATION

This fan has incorporated with a timer, the range is between 0.5-7.5 hours. You can set your fan to automatically turn itself off after your scheduled time of operation.

To Set Timer Operation

To use this feature, simply press the "TIMER" button on the remote control or the "⏲" button on the "feather-touch control pad".

The illuminated lights on the front of the fan will display the time you have set. Each light represents an amount of time.

To cancel Timer Operation

Press the timer button until all the time lights disappear.

CLEANING INSTRUCTIONS

- Turn the fan OFF and unplug the fan before cleaning.
- Only use a soft, damp cloth to gently wipe the fan clean.
- **DO NOT immerse the fan in water or allow water to drip into the motor housing.**
- **DO NOT use gasoline, paint thinner, or other chemicals to clean the fan.**

TROUBLESHOOTING

Q: How do I turn the fan ON?

A: Using the remote control, press the "ON/OFF" button, or press the "⏻" button on the control panel located on the top of the fan.

Q: What happens if I have two fans and two remote controls?

A: If both fans are same model #, then both remote controls will work on either fan.

CIRCUIT DIAGRAM

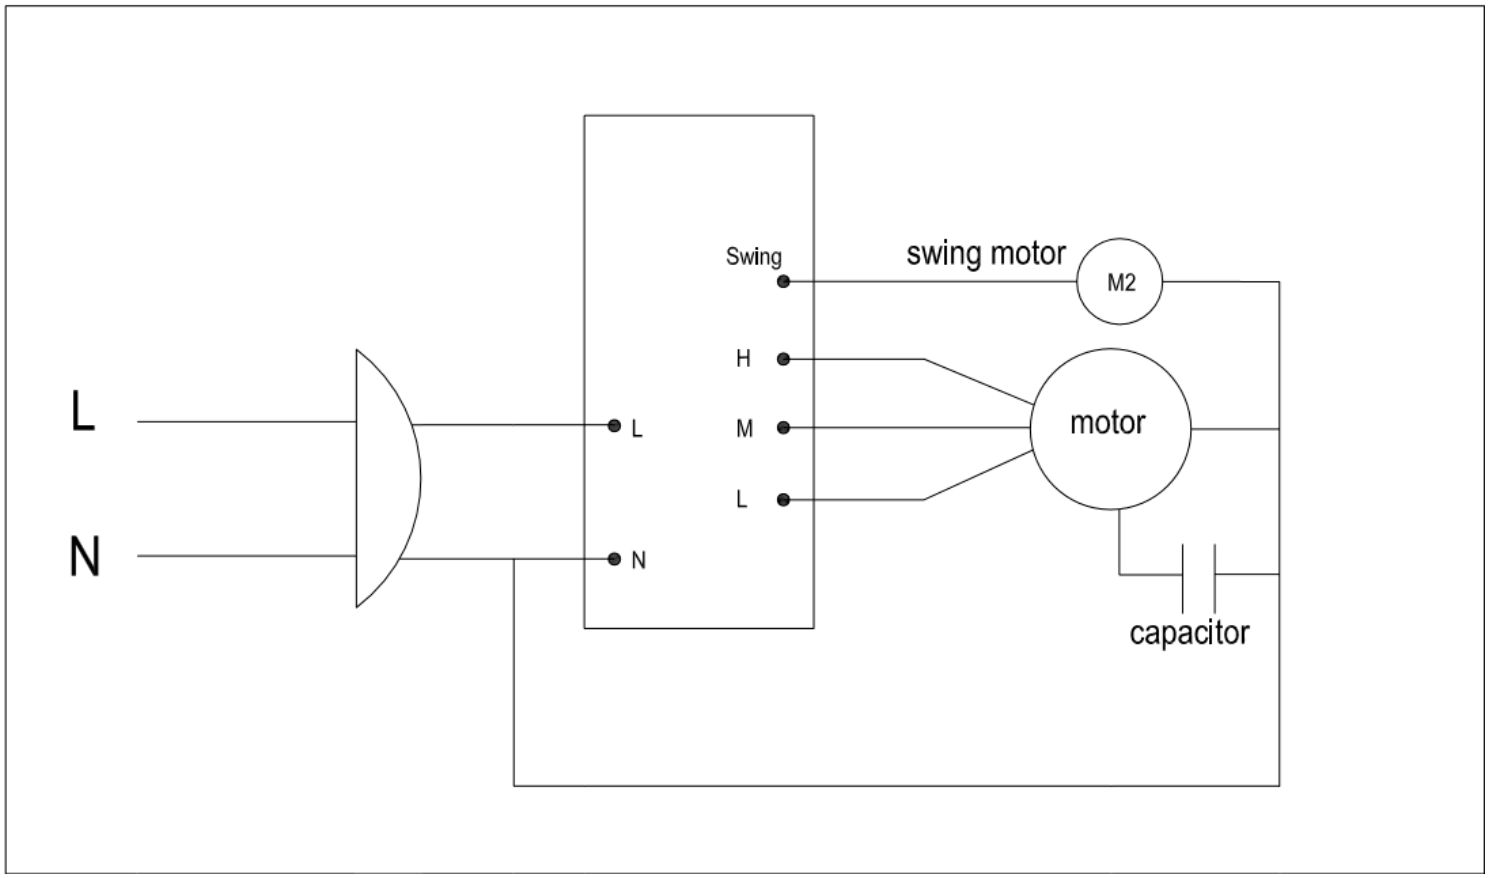

MODEL NO	INPUT VOLTAGE	RATED	CLASS
AB-4919T	AC110V/60Hz	55W	II